

Club Car 4", 6", 7.5" Super Sport Lift Kit Instructions

Front Disassembly

- Raise unit & support frame with jack stands
- Remove wheels & wheel hubs
- Remove draglink from steering rack & tie-rod from steering arms
- Remove shock absorbers from O.E.M. Delta Plates
- Remove O.E.M. A-Arms (Delta Plates)
- Remove bolts from leaf spring mounting plate & the lower O.E.M. parts
- Remove four (4) bolts holding shock tower to frame & discard O.E.M. spring plate. (Save two (2) Bolts)


Front Assembly

- Install new lower A-Arm assy. By locating (2) 3/8" bolts on assy. into frame holes & install nyloc nuts.
- Install (2) rear bolts in A-Arm assy. w/ Spacer Tubes & tighten all (4) bolts.

Note: Use two (2) O.E.M. bolts w/ new nuts.

- Install new upper A-Arms w/ supplied bolts & nuts. Install shocks.
- Install spindles to A-Arms (Do not tighten bolts)
- Re-install wheel hubs & steering components.
- Install wheels & remove jack stands
- Lower Cart to Ground & Adjust Camber with Ball Joints

Note: Apply Supplied Thread Locker to Ball Joint Bolts & Tighten Bolts.
Adjust toe-in w/ tie-rod (0" – 1/8" toe-in at front of tires)

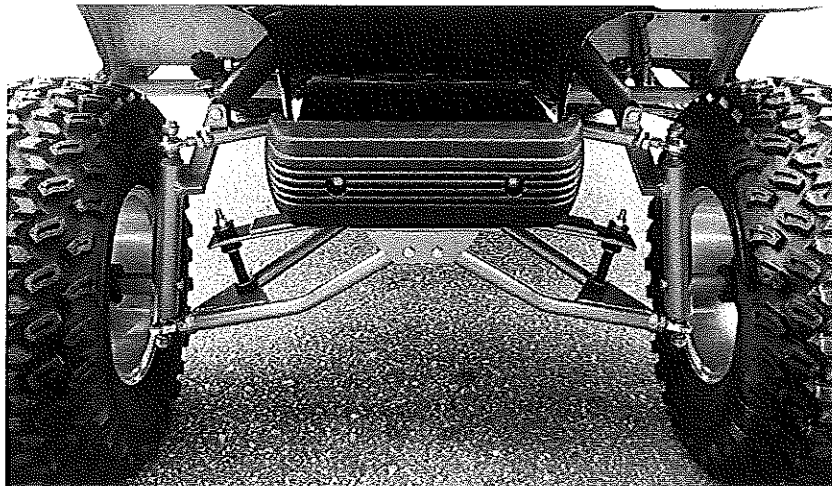

Rear Assembly

- Raise unit & support frame w/ jack stands.
- Remove shocks from axle.
- Remove wire clips holding brake cables to frame.

Electric

- On some models it may be necessary to lengthen motor wires.

Note: The following steps should be done on one side of the cart at a time.

- Remove O.E.M. u-bolt & lower brake cable plate

Note: (DO NOT remove cable from plate!)

- Raise axle off of leaf spring. Remove leaf spring.
- Lower axle & re-install leaf spring.
- Install new u-bolt w/ shock mount onto leaf spring & re-install brake cable plate onto u-bolt. Start nuts onto u-bolts.
- Install axle seat between axle & leaf spring & tighten u-bolt.
- Repeat on other side of cart.
- Install shocks to new shock mounts.

